

A QUICK START GUIDE

First refer to the manual that accompanied your unit. Check frequently the KirmussAudio web site for the latest manual and forthcoming instructional videos. AFTER READING THE MANUAL COMPLETELY AND YOU HAVE FINISHED PREPARING THE SYSTEM AS OUTLINED IN STEP 1 AS EXPLAINED IN THE MANUAL, this insert is a pictorial guide to assist you. STEPS TO FOLLOW FOR ALL VINYL RECORDS, NEW OR VINTAGE:



WITH THE UNIT TURNED ON, THE TIMER WILL SHOW 5:00. PRESS THE START BUTTON TWICE AND INSERT RECORD(S) INTO THE RECORD ASSEMBLY. RECORDS WILL SPIN. THE TIMER WILL COUNT DOWN TO 0:00.



WHEN THE TIMER IS AT 0:00, THE SYSTEM WILL STOP. THE RECORD STOPS SPINNING. TAKE THE RECORD OUT, TAP DRY, AND PLACE ON THE FELT SUSPENSION MAT PER MANUAL.



THEN, APPLY A LIGHT SPRAY OF SURFACTANT AT 12, 4 AND 8 O'CLOCK POSITIONS ONTO THE RECORD.



USE THE SUPPLIED BRUSH AND IN A CIRCULAR FASHION, BRUSH THE SURFACTANT IN.

START THE MACHINE, INSERT RECORD(s) FOR ANOTHER 5 MINUTE CYCLE.

**TAKE THE RECORD OUT AT 0:00, PLACE ON MAT.
THEN APPLY SECOND APPLICATION OF SURFACTANT SPRAY AS BEFORE.**

AFTER A WASH CYCLE AND WHILE BRUSHING IN THE SURFACTANT IN A CIRCULAR FASHION AND IF YOU SEE ONE OF THESE:

REPEAT


A LIGHT WHITE SUBSTANCE OR BUBBLES BUT EVAPORATE QUICKLY:



THIS IS YOUR LAST 5 MINUTE CYCLE, AFTERWARDS DRY AND THEN POLISH.

OR

A HEAVY, GREASE - LIKE, TOOTHPASTE - LIKE SUBSTANCE REMAIN ON THE RECORD OR VERY SLOWLY EVAPORATE

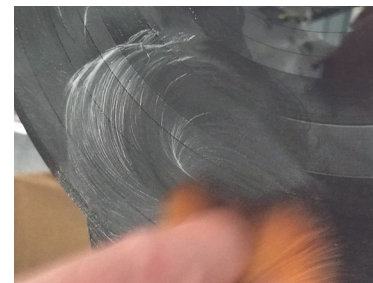


RUN FOR ANOTHER 5 MINUTE CYCLE, THEN RE-APPLY SURFACTANT WITH BRUSH AND REVIEW MATERIALS COMING OFF RECORD AS BEFORE

OTHER POINTS:

-Never run the machine for more than 35 minutes. After 35 minutes of continuous use, turn the machine off for 10-15 minutes to allow the ceramic ultrasonic transducers in the unit to cool. Failure to do so will damage the unit and void warranty. **NEVER RUN THE MACHINE WITH AN EMPTY TANK!**



-The temperature status bar on the unit moves from left to right as the unit is used, this as the ultrasonic bubbles that cavitate generate heat which in turns warms the water in the tub. Green, then Green—Orange, then Green-Orange-Red will appear as temperature approaches 95 deg. F. (35 C.). This is normal.

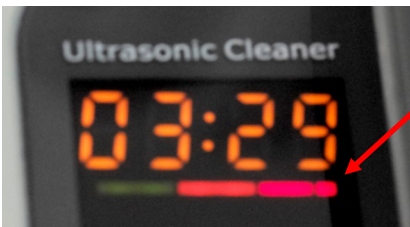

-When you see a **SMALLER RED LIGHT BAR APPEAR AND FLASH TO THE RIGHT OF THE LONG RED BAR**, the water in the tank has reached 95 deg. F. (35 C), Turn the unit off and let cool for 10-15 minutes.

TIPS:

- NEVER LEAVE A RECORD IN THE UNIT WHEN THE RECORD IS NOT SPINNING.
- CHANGE THE WATER OUT AFTER WASHING 15-20 RECORDS OR WHEN THE WATER IN THE TANK BECOME MURKY, WHICH EVER COMES FIRST.
- NEVER LEAVE WATER IN THE TANK IF THE SYSTEM IS NOT IN USE. DISCARD USED WATER.
- DO NOT REUSE THE WATER AFTER A SESSION AS DESCRIBED ABOVE.
- BETWEEN APPLICATIONS OF SURFACTANT, RINSE THE GOAT HAIR BRUSH WITH DISTILLED WATER. DRY THE BRUSH USING THE RABBIT CLOTH. THEN SHAKE DRY.
- AFTER THE LAST 5 MINUTE CYCLE USING THE SURFACTANT AND USING A SPRAY BOTTLE SET TO MIST, APPLY A LIGHT MIST OF DISTILLED WATER TO THE RECORD AT 12, 4 AND 8 O'CLOCK POSITIONS, THEN USE THE MICRO FIBER OPTICIAN'S CLOTH, THEN THE PARASTATIC FELT BRUSH TO DRY AND POLISH THE RECORD. THEN FOLLOW THE MANUAL TO POLISH THE RECORD BEFORE USE OR STORAGE.



KirmussAudio

YOU HEAR AND SEE THE RESULT.

THE SOUND CHOICE FOR YOUR RECORDS!

WWW.KIRMUSSAUDIO.COM